




## Quartz Tube Heaters

\* Standard Tubing Adaptors on ALL Series 001 Air Heaters have a 1/4" NPT Female Thread for use with a compression tube fitting (not supplied).

\* To order an 001 Series Air Heater with a PLAIN Tubing Adaptor (NO Threads) use the suffix "T" at the end of the Part Number. This adaptor accepts a 3/8" OD Tube.



Part Number	Type	Dimensions				Wattage at Standard Voltages		
		A	B	C	D	60V	120V	240V
001-10001 001-10001T	OPEN	6.875"	8.25"	.410"	-	115	465	1850
001-10002 001-10002T	NOZZLE	7.875"	9.25"	.410"	.065"	115	465	*
001-10003 001-10003T	OPEN	7.75"	9.125"	.410"	-	210	850	*
001-10004 001-10004T	NOZZLE	8.75"	10.125"	.410"	.065"	210	850	*
001-10005 001-10005T 001-10005TA	OPEN	3.875"	5.25"	.410"	-	240	*	*
001-10006 001-10006T	NOZZLE	4.875"	6.25"	.410"	.065"	240	*	*
001-10007 001-10007T	OPEN	3.875"	5.25"	.410"	-	480	*	*
001-10008 001-10008T	NOZZLE	4.875"	6.25"	.410"	.065"	480	*	*
001-10009 001-10009T	OPEN	6.875"	8.25"	.594"	-	290	1150	4650
001-10010 001-10010	NOZZLE	7.875"	9.25"	.594"	.115"	290	1150	*

\*not recommended  
Standard Wattage Tolerances +5% / -10%

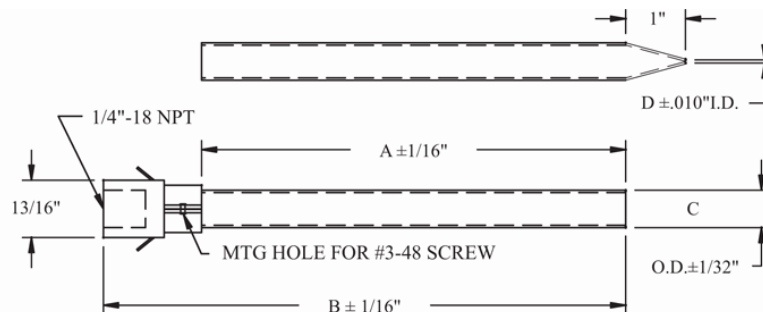

Nozzled Air Heaters



Open Air Heaters

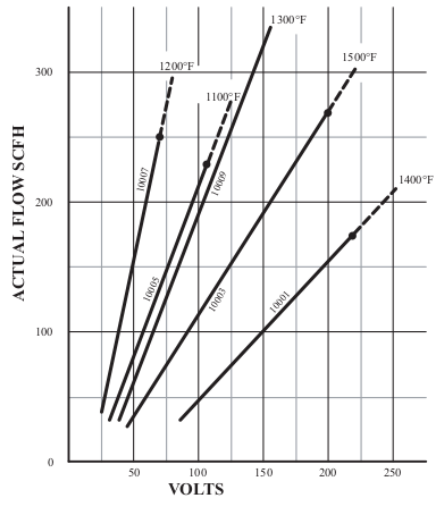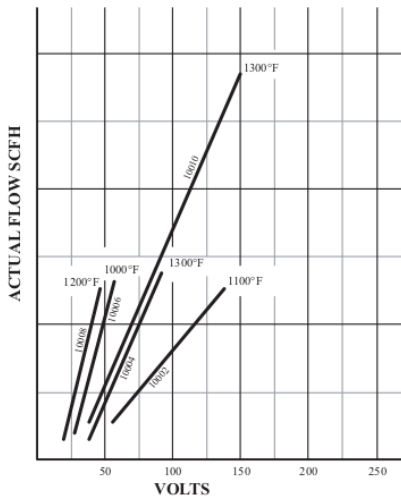



— Recommended Element Temperature  
 - - - Above Recommended Element Temperature  
 ● Maximum Recommended Flow

## Operating Instructions for Flameless Electric Air Heaters

### Performance Characteristics - Style 001

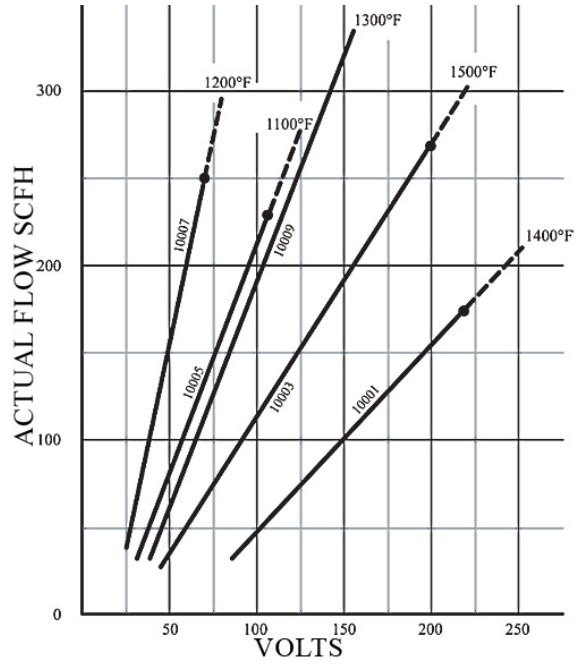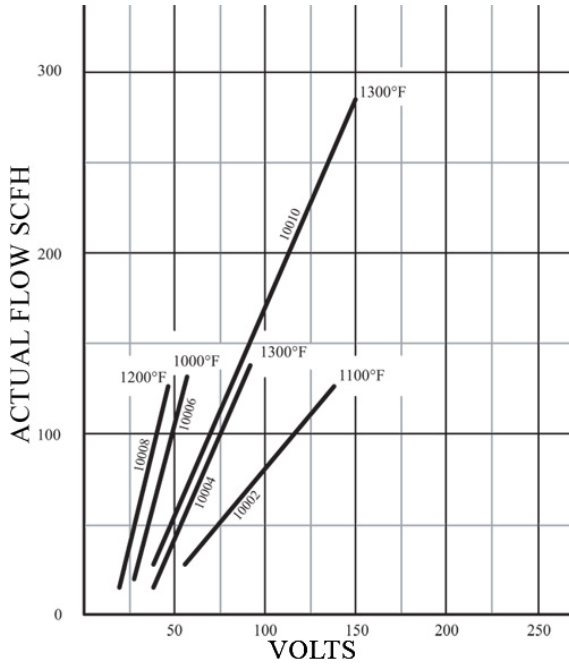

### Performance Characteristics - Style 003

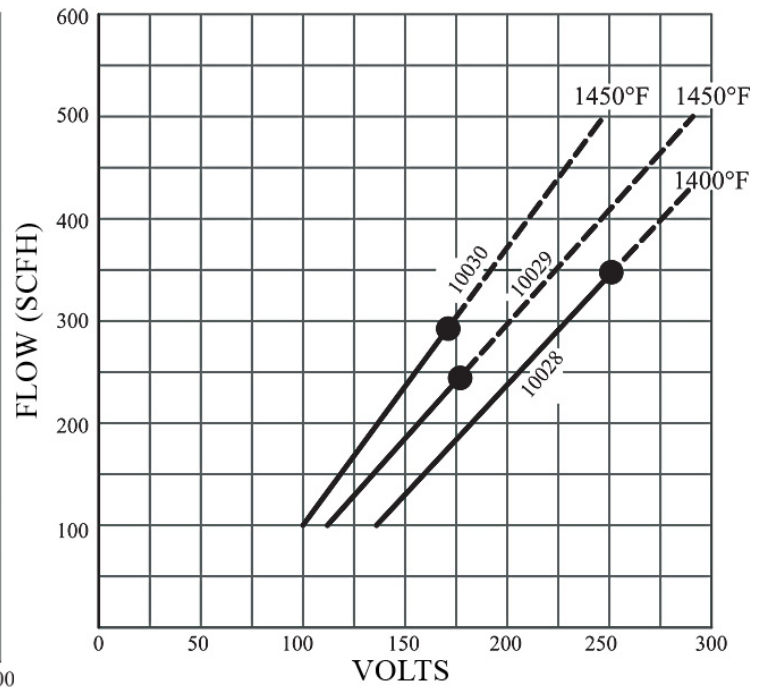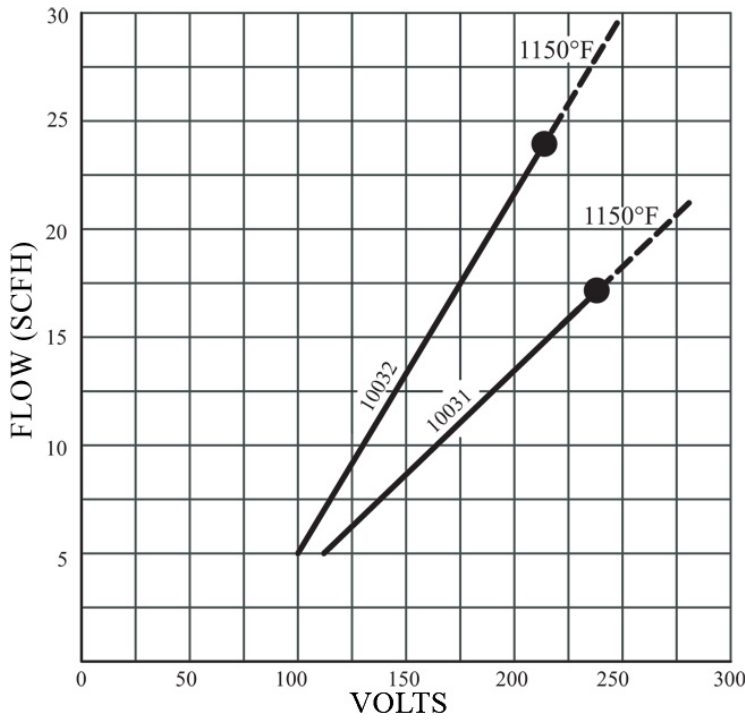

### Mounting

Mount heater in desired position. Care should be taken not to restrict exit end of heater. Mechanical shock and vibration should be minimized. Those heaters with quartz envelopes (Style 001) should be handled with a protective layer of cloth or paper to prevent contamination from finger prints. If quartz is contaminated, it should be cleaned with soap and water or mild solvent prior to operation of heater.

### Air Supply

Connect a clean filtered and regulated air source to the inlet air connection of the heater. This air must be free of oils and other forms of contamination to prevent drastic reduction of heater life. A means of regulation is required so that the air flow rate can be adjusted and controlled which will allow maximum heater performance flexibility. A blower capable of operating at 1-2 PSI can be used to supply the 13" housing (Style 003). A compressed air source is required for the other heater types because of the higher pressures involved.

### Electric Power Connections

#Electric connections are made through ¼ x .032 male disconnects provided on Style 001 heaters or through the lead wires provided on Style 003 heaters. These connections should be made to the appropriate voltage source by means of a variable transformer so that voltage to the heater can be manually controlled. ProTherm offers a Power Control Module (#006-10062) which can be used in place of the transformer. This solid state device is rated up to 25 amps and offers infinitely variable phase control. ProTherm also offers temperature controllers to operate in conjunction with a solid state contactor (with adjustable voltage limiting). Because of the low mass and quick response of these heaters, use only phase angle power control (not zero cross) with voltage limiting.

### Operation

Consult performance curves before operation of heater. Air temperature and ultimately the heater life depend on the heater type, the air flow rate, and the applied voltage. Do not operate beyond the recommended limits. Maximum heater life will occur when the filament temperature does not exceed 1950° F.

Turn on air source and adjust to desired flow rate before applying voltage to heater. Air flow should not be stopped until after power has been turned off and heater has cooled. Pressure switches are available, which can be used to automatically turn off power if air flow is too low or stopped.

Turn on power source and increase voltage until desired temperature is reached. When automatic controls are used, set voltage limiting adjustment so that the maximum voltage does not exceed 100% of the normal steady state value required to maintain the desired conditions. Too high a setting will cause the heater to overshoot, cycle excessively and reduce its life. Do Not use zero cross systems.

When a shield or flare is used with the Style 001 heaters the heater becomes more efficient and therefore the required power will be 10-20% less than normal.

Please call ProTherm at (615) 834-4044 if additional assistance is needed to install or operate these products.